



Juniper Networks MX240, MX480, MX960 3D Universal Edge Routers with RE-S-X6-64G Routing Engine and Multiservices MPC

Firmware: Junos OS 19.1R2

Non-Proprietary FIPS 140-2 Cryptographic Module Security Policy

Version: 1.0

Date: May 22, 2020



Juniper Networks, Inc.
1133 Innovation Way
Sunnyvale, California 94089
USA
408.745.2000
1.888 JUNIPER
www.juniper.net

Contents

1	Introduction	4
1.1	Hardware and Physical Cryptographic Boundary	7
1.2	Modes of Operation	8
1.2.1	FIPS Approved Modes	8
1.2.2	Non-Approved Mode	9
1.3	Zeroization	9
2	Cryptographic Functionality	11
2.1	Allowed Algorithms and Protocols.....	11
2.2	Disallowed Algorithms and Protocols	15
2.3	Critical Security Parameters	16
3	Roles, Authentication and Services	18
3.1	Roles and Authentication of Operators to Roles	18
3.2	Authentication Methods	18
3.3	Approved and Allowed Services.....	19
3.4	Non-Approved Services.....	21
4	Self-tests.....	23
5	Physical Security Policy.....	25
6	Security Rules and Guidance	20
6.1	Cryptographic-Officer Guidance	21
6.1.1	Installing the FIPS-Approved firmware image	21
6.1.2	Enabling FIPS-Approved Mode of Operation	21
6.1.3	Placing the Module in a Non-Approved Mode of Operation.....	23
6.2	User Guidance	23
7	References and Definitions	25

List of Tables

Table 1 – Cryptographic Module Hardware Configurations	5
Table 2 – Security Level of Security Requirements	6
Table 3 – Ports and Interfaces	8
Table 4 – Kernel Approved Cryptographic Functions	11
Table 5 – LibMD Approved Cryptographic Functions	11
Table 6 – OpenSSL Approved Cryptographic Functions	11
Table 7 – QuickSec Approved Cryptographic Functions	13
Table 8 – XLP (MS-MPC) Approved Cryptographic Functions	14
Table 9 – Allowed Cryptographic Functions	14
Table 10 – Protocols Allowed in FIPS Mode	14
Table 11 – Critical Security Parameters (CSPs)	16
Table 12 – Public Keys	17
Table 13 – Authenticated Services in FIPS Standard and Reduced Throughput Modes	19
Table 14 – Authenticated Services in FIPS Recovery Mode	19
Table 15 – Unauthenticated Services in FIPS Standard and Reduced Throughput Modes	19
Table 16 – Unauthenticated Services in FIPS Recovery Mode	20
Table 17 – CSP Access Rights within Services	20
Table 18 – Non-Approved Authenticated Services in FIPS Standard and Reduced Throughput Modes 21	
Table 19 – Non-Approved Authenticated Services in FIPS Recovery Mode	21
Table 20 – Non-Approved Unauthenticated traffic in FIPS Standard and Reduced Throughput Modes 22	
Table 21 – Non-Approved Unauthenticated Services in FIPS Recovery Mode	22
Table 22 – References	25
Table 23 – Acronyms and Definitions	25
Table 24 – Datasheets	26

List of Figures

Figure 1 – Physical Cryptographic Boundary (Left to Right: MX240, MX480, MX960)	7
Figure 2 – Multiservices MPC (MS-MPC)	7

1 Introduction

This is a non-proprietary Cryptographic Module Security Policy for the Juniper Networks MX240, MX480, MX960 3D Universal Edge Routers with RE-S-X6-64G Routing Engine and Multiservices MPC. The MX series provides dedicated high-performance processing for flows and sessions and integrates advanced security capabilities that protect the network infrastructure as well as user data.

This FIPS 140-2 validation includes the following MX series router models: the MX240, MX480 and MX960, each loaded with the MS-MPC, which provides hardware acceleration for an array of packet processing-intensive services such as Session Border Control functions, stateful firewall, NAT, flow monitoring, and anomaly detection. This integration allows customers to eliminate external firewalls that consume router ports and additional management resources. The FIPS validated version of firmware is Junos OS 19.1R2.

The cryptographic boundary for the MX Series is defined as follows for the validation:

- The outer edge of the chassis and including the Routing Engine (RE), the MS-MPC, Router Control Board/Router Fabric Board (SCB)/(SFB) and slot covers in the following configurations:
 - For MX240 (2 available RE slots, 2 additional slots): 1 SCB, 1 RE (RE-S-X6-64G), and at least 1 MS-MPC. All empty module bays must have a slot cover installed for proper cooling air circulation.
 - For MX480 (2 available RE slots, 6 additional slots): 1 SCB, 1 RE (RE-S-X6-64G), at least 1 MS-MPC. All empty module bays must have a slot cover installed for proper cooling air circulation.
 - For MX960 (2 available RE slots, 12 additional slots): 1 SCB, 1 RE (RE-S-X6-64G), at least 1 MS-MPC. All empty module bays must have a slot cover installed for proper cooling air circulation.
- Includes the inverse three-dimensional space where non-crypto-relevant line cards fit, with the backplane port serving as the physical interface.
- Excluding the power distribution module on the rear of the device.

The cryptographic modules provide for an encrypted connection, using SSH, between the management station and the module. The cryptographic modules also provide for an encrypted connection, using IPsec. All other data input or output from the modules are considered plaintext for this FIPS 140-2 validation.

The cryptographic modules are defined as multiple-chip standalone modules that execute Junos OS 19.1R2 firmware on any of the Juniper Networks MX 3D Universal Edge Routers listed in Table 1 below.

Table 1 – Cryptographic Module Hardware Configurations

Chassis PN	Power PN	SCB PN	RE PN	MS PN
MX240	PWR-MX480-2400-DC PWR-MX480-2520-AC	SCBE2-MX	RE-S-X6-64G	MS-MPC
MX480	PWR-MX480-2400-DC PWR-MX480-2520-AC	SCBE2-MX	RE-S-X6-64G	MS-MPC
MX960	PWR-MX960-4100-DC PWR-MX960-DC PWR-MX960-4100-AC PWR-MX960-AC	SCBE2-MX	RE-S-X6-64G	MS-MPC

The parts tested for this FIPS 140-2 validation are identified in Table 1.

Juniper also offers an enhanced routing engine that can be used in the MX series routers (RE-S-X6-128G). The enhanced routing engine offers SSDs with more storage capacity (2x100G), and RAM with more memory (128G) than the routing engines tested.

Juniper affirms that the enhanced routing engines use the same cryptographic functions that are available in the routing engines listed in Table 1. However, the RE-S-X6-128G routing engine was not tested for this FIPS 140-2 validation. No claim can be made as to the conformance of the MX series routers with the enhanced routing engine for they were not tested by a CSTL or reviewed by the CMVP.

The modules are designed to meet FIPS 140-2 Level 1 overall:

Table 2 – Security Level of Security Requirements

Area	Description	Level
1	Module Specification	1
2	Ports and Interfaces	1
3	Roles, Services, and Authentication	3
4	Finite State Model	1
5	Physical Security	1
6	Operational Environment	N/A
7	Key Management	1
8	EMI/EMC	1
9	Self-test	1
10	Design Assurance	3
11	Mitigation of Other Attacks	N/A
	<i>Overall</i>	1

The modules have a limited operational environment as per the FIPS 140-2 definitions. They include a firmware load service to support necessary updates. Any firmware versions other than Junos OS 19.1R2, loaded into the modules are out of the scope of this validation and require a separate FIPS 140-2 validation.

The modules do not implement any mitigations of other attacks as defined by FIPS 140-2.

1.1 Hardware and Physical Cryptographic Boundary

The cryptographic modules' operational environment is a limited operational environment.

The image below depicts the physical boundary of the modules. The boundary includes the Routing Engine, MS-MPC, and SCB/SFB. The boundary excludes the non-crypto-relevant line cards included in the figure. The modules exclude the power supplies from the requirements of FIPS 140-2. The power supplies do not contain any security relevant components and cannot affect the security of the module.



Figure 1 – Physical Cryptographic Boundary (Left to Right: MX240, MX480, MX960)

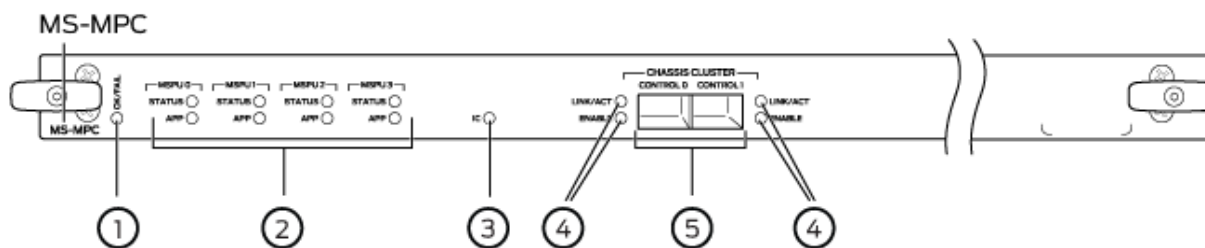


Figure 2 – Multiservices MPC (MS-MPC)

- | | |
|------------------------------|-----------------------------------|
| 1 — OK/Fail LED | 4 — Link/Act and Enable LEDs |
| 2 — MSPU Status and APP LEDs | 5 — Control 0 and Control 1 ports |
| 3 — IC LED | |

Table 3 – Ports and Interfaces

Port	Device (# of ports)	Description	Logical Interface Type
Ethernet	MX240/MX480/MX960: Management port (1)	LAN Communications/Remote management	Control in, Data in, Data out, Status out
Serial	MX240 (1), MX480 (1), MX960 (1)	Console serial port	Control in, Data in, Data out Status out
USB	MX240 (2), MX480 (2), MX960 (2)	USB port - load Junos image	Control in, Data in
Power	MX240 (4), MX480 (4), MX960 (4)	Power connector, Power over Ethernet	Power
LEDs	MX240 (2), MX480 (2), MX960 (2), MS-MPC (14)	Status indicator lighting	Status out
Online/Offline Indicator	MX240 (3), MX480 (3), MX960 (3)	Status indicator lighting	Status out
Master/Slave Indicator	MX240 (3), MX480 (3), MX960 (3)	Status indicator lighting	Status out
Reset Button	MX240 (1), MX480 (1), MX960 (1)	Reset	Control in
Online/Offline Button	MX240 (1), MX480 (1), MX960 (1)	Online/Offline	Control in
Chassis Cluster Control	MX240/MX480/MX960/MS -MPC	Disabled	N/A
Aux	MX240 (1), MX480 (1), MX960 (1)	Disabled	N/A
Backplane	MX240 (1), MX480 (1), MX960 (1)	Line card backplane interface	Control in, Data in, Status out, Data out

1.2 Modes of Operation

The module supports three FIPS Approved modes of operation and a non-Approved mode of operation. The module must always be zeroized when routing between any FIPS Approved mode of operation and the non-Approved mode of operation and vice versa.

1.2.1 FIPS Approved Modes

The hardware versions contained in Table 1, with Junos OS 19.1R2 installed, contain three FIPS-Approved modes of operation and a non-Approved mode of operation. The Junos OS 19.1R2 firmware image must be installed on the device. The module is configured during initialization to operate in an approved mode or a non-approved mode.

The Crypto-Officer places the module in an Approved mode of operation by following the instructions in the crypto-officer guidance (section 6.1).

The Crypto-Officer can verify that the cryptographic module is in an Approved mode by observing the console prompt and running the “show version” command. When operating in FIPS mode, the prompt will read “<user>@<device name>: fips#” (e.g. crypto-officer@mx240: fips#). The “show version” command will allow the Crypto-Officer to verify that the validated firmware version is running on the module. The Crypto-Officer can also use the “show system fips chassis level” command to determine if the module is operating in FIPS mode.

The module supports three Approved modes of operation. The three modes are identified as “FIPS Standard Mode”, “FIPS Reduced Throughput Mode” and “FIPS Recovery Mode.”

The FIPS Standard Mode is entered when the module is configured for FIPS mode and successfully passes all the power on self-tests (POST) in both the routing engine (RE) and in each PIC of each of the MS-MPC line cards installed in the chassis of the module (the maximum number of MS-MPC line cards that can be installed in the module chassis is 2 in case of the MX240, 6 in case of the MX480 and 12 in case of the MX960 modules). In the Standard and Reduced Throughput Approved modes, the module supports the Approved and allowed algorithms, functions and protocols identified in Tables 4 - 8. The services available in these modes are described in Table 13 and Table 17.

The Reduced Throughput mode is automatically selected by the module at power-up when the RE self-tests pass, at least one PIC (each MS-MPC contains 4 PICs) in at least one of the MS-MPC line cards inserted in the chassis passes its self-tests, and at least one PIC in at least one of the MS-MPC line cards fails its self-tests. In this mode, the module offers reduced throughput VPN services.

In the Recovery Approved mode, the module supports the algorithms in Tables 4-6. The Recovery mode is automatically selected by the module at power-up if at least one PIC in each of the MS-MPC cards fails its power-up self-tests but the RE self-tests pass. In this mode, the module does not offer VPN services. The services available in the Recovery mode are described in Table 14 and Table 18.

1.2.2 Non-Approved Mode

The cryptographic module supports a non-Approved mode of operation. When operated in the non-Approved mode of operation, the module supports the algorithms identified in Section 2.2 as well as the algorithms supported in the Approved mode of operation.

The Crypto-Officer can place the module into a non-approved mode of operation by following the instructions in the crypto-officer guidance (section 6.1).

1.3 Zeroization

The cryptographic module provides a non-Approved mode of operation in which non-Approved cryptographic algorithms are supported. When transitioning between the non-Approved mode of operation and the FIPS-Approved mode of operation, or vice-versa, the Crypto Officer shall zeroize all keys and CSPs.

Zeroization completely erases all configuration information on the Router. The Crypto Officer initiates the zeroization process by entering the “*request vmhost zeroize no-forwarding*” operational command from the CLI after enabling FIPS mode. Use of this command is restricted to the Crypto Officer. (To zeroize the system *before* enabling FIPS mode, use the “*request vmhost zeroize no-forwarding*”

command.)

Use of the zeroize command is restricted to the Crypto Officer. The Crypto Officer shall perform zeroization in the following situations:

1. Before FIPS Operation: To prepare the device for operation as a FIPS cryptographic module by erasing all CSPs and other user-created data on a device before its operation as a FIPS cryptographic module.
2. Before non-FIPS Operation: To conduct erasure of all CSPs and other user-created data on a device in preparation for repurposing the device for non-FIPS operation.

CAUTION: Perform system zeroization with care. After the zeroization process is complete, no data is left on the Routing Engine. The device is returned to the factory default state, without any configured users or configuration files.

To zeroize the device:

1. From the CLI, enter

```
crypto-officer@device> request vmhost zeroize no-forwarding
```

VMHost Zeroization : Erase all data, including configuration and log files ? [yes,no] (no)

2. To initiate the zeroization process, type “yes” at the prompt:

VMHost Zeroization : Erase all data, including configuration and log files ? [yes,no] (no) yes

3. When the system finishes rebooting the system will be in a factory default state.

Note: The Crypto Officer must retain control of the module while zeroization is in process.

2 Cryptographic Functionality

2.1 Allowed Algorithms and Protocols

The module implements the FIPS Approved and Non-Approved but Allowed cryptographic functions listed in Tables 4, 5, 6, 7, 8 and 9 below. The Allowed Protocols in Table 10 summarizes the high-level protocol algorithm support. There are some algorithm modes that were tested but not implemented by the module. Only the algorithms, modes, and key sizes that are implemented by the module are shown in this/these table(s).

Table 4 – Kernel Approved Cryptographic Functions

CAVP Cert.	Algorithm	Standard	Mode	Description	Functions
C1784	DRBG	SP800-90A	HMAC	SHA-256	Random Bit Generation
C1784	HMAC	PUB 198	SHA-1	Key size: 160 bits, $\lambda = 96$	Message Authentication, DRBG Primitive
			SHA-256	Key size: 256 bits, $\lambda = 128, 256$	
C1784	SHS	PUB 180-4	SHA-1 SHA-256 SHA-384 SHA-512		Message Digest Generation

Table 5 – LibMD Approved Cryptographic Functions

CAVP Cert.	Algorithm	Standard	Mode	Description	Functions
C1785	HMAC	PUB 198	SHA-1	Key size: 160 bits, $\lambda = 96$	Message Authentication
			SHA-256	Key size: 256 bits, $\lambda = 128, 256$	
C1785	SHS	PUB 180-4	SHA-1 SHA-256 SHA-512		Message Digest Generation

Table 6 – OpenSSL Approved Cryptographic Functions

CAVP Cert.	Algorithm	Standard	Mode	Description	Functions
C1786	AES ¹	PUB 197-38A	CBC, CTR, ECB	Key Sizes: 128, 192, 256	Encrypt, Decrypt
N/A ²	CKG	SP 800-133rev2	Section 5.1 Section 5.2		A generated seed used in asymmetric key generation using

¹ The AES-ECB mode was used for testing the AES-CTR mode.

² Vendor Affirmed

CAVP Cert.	Algorithm	Standard	Mode	Description	Functions
					an unmodified DRBG output
			Section 6.2.1		Derivation of symmetric keys
N/A ³	KAS-SSC	SP 800-56Arev3	ECC DH	P-256 (SHA 256) P-384 (SHA 384) P-521 (SHA 512)	Key Agreement Scheme
C1786	CVL	SP 800-135	SSH	SHA 1, 256, 384, 512	Key Derivation
C1786	DRBG	SP 800-90A	HMAC	SHA-256	Random Number Generation
C1786	ECDSA	PUB 186-4		P-256 (SHA 256) P-384 (SHA 384) P-521 (SHA 512)	SigGen, KeyGen, SigVer, PKV
C1786	HMAC	PUB 198	SHA-1	Key size: 160 bits, $\lambda = 160$	Message Authentication
			SHA-224	Key size: 224 bits, $\lambda = 192$	
			SHA-512	Key size: 512 bits, $\lambda = 512$	
			SHA-256	Key size: 256, bits, $\lambda = 256$	Message Authentication, DRBG Primitive
N/A	KTS		AES Cert. #C1786 and HMAC Cert. #C1786		key establishment methodology provides between 128 and 256 bits of encryption strength
			Triple-DES Cert. #C1786 and HMAC Cert. #C1786		key establishment methodology provides 112 bits of encryption strength
C1786	RSA	PUB 186-4		n=2048 (SHA 256, 512) n=3072 (SHA 256, 512) n=4096 (SHA 256, 512)	KeyGen, SigGen ⁴ , SigVer ⁵
C1786	SHS	PUB 180-4	SHA-1 SHA-256		Message Digest Generation,

³ Vendor Affirmed per IG D.1rev3

⁴ 186-4 RSA 4096 SigGen was not tested by the CAVP; however, it is Approved for use per CMVP guidance, because 186-2 RSA 4096 SigGen was tested and testing for 186-4 RSA 4096 SigGen is not available.

⁵ RSA 4096 SigVer was not tested by the CAVP; however, it is Approved for use per CMVP guidance, because RSA 2048 SigVer was tested and testing for RSA 4096 SigVer is not available.

CAVP Cert.	Algorithm	Standard	Mode	Description	Functions
			SHA-384 SHA-512		KDF Primitive
			SHA-224		Message Digest Generation
C1786	Triple-DES	SP 800-67	TCBC	Key Size: 192	Encrypt, Decrypt

Table 7 – QuickSec Approved Cryptographic Functions

CAVP Cert.	Algorithm	Standard	Mode	Description	Functions
C1787	AES	PUB 197-38A	CBC	Key Sizes: 128, 192, 256	Encrypt, Decrypt
C1787	DRBG	SP 800-90A	HMAC	SHA-256	Random Bit Generation
N/A ⁶	CKG	SP 800-133rev2	Section 5.1 Section 5.2		Asymmetric key generation using unmodified DRBG output
			Section 6.2.1		Derivation of symmetric keys
C1787	CVL	SP 800-135	IKEv1	SHA-1, SHA-256, SHA-384	Key Derivation
			IKEv2	SHA-1, SHA-256, SHA-384	
C1787	HMAC	PUB 198	SHA-1 SHA-256 SHA-384	Key size: 160 bits, $\lambda = 160$	Message authentication
				Key size: 256 bits, $\lambda = 256$	
				Key size: 384 bits, $\lambda = 192, 384$	
N/A	KTS		AES Cert. #C1787 and HMAC Cert. #C1787		Key establishment methodology provides between 128 and 256 bits of encryption strength
			Triple-DES Cert. #C1787 and HMAC Cert. #C1787		Key establishment methodology provides 112 bits of encryption strength
C1787	SHS	PUB 180-4	SHA-1 SHA-256 SHA-384		Message Digest Generation, KDF Primitive
C1787	Triple-DES	SP 800-67	TCBC	Key Size: 192	Encrypt, Decrypt

⁶ Vendor Affirmed

Table 8 – XLP (MS-MPC) Approved Cryptographic Functions

CAVP Cert.	Algorithm	Standard	Mode	Description	Functions
C1788	AES	PUB 197-38A	CBC	Key Sizes: 128, 192, 256	Encrypt, Decrypt
		SP 800-38D	GCM	Key Sizes: 128,192, 256	Encrypt, Decrypt
N/A ⁷	KAS-SSC	SP 800-56Arev3	FFC DH	2048 (SHA 256)	Key Agreement Scheme
			ECC DH	P-256 (SHA 256) P-384 (SHA 384)	Key Agreement Scheme
C1788	ECDSA	PUB 186-4		P-256 (SHA 256) P-384 (SHA 384)	SigGen, SigVer
C1788	HMAC	PUB 198	SHA-256	Key size: 256, $\lambda = 128$	Message authentication.
C1788	RSA	PUB 186-4		n=2048 (SHA 256) n=3072 (SHA 256) n=4096 (SHA 256)	SigGen, SigVer ⁸
C1788	SHS	PUB 180-4	SHA-256		Message Digest ESP Generation
C1788	Triple-DES	SP 800-67	TCBC	Key Size: 192	Encrypt, Decrypt

Table 9 – Allowed Cryptographic Functions

Algorithm	Caveat	Use
NDRNG [IG] 7.14 Scenario 1a	The module generates a minimum of 256 bits of entropy for key generation.	Seeding the DRBG

Table 10 – Protocols Allowed in FIPS Mode

Protocol	Key Exchange	Auth	Cipher	Integrity
IKEv1 ⁹	Diffie-Hellman (L = 2048, N = 256) EC Diffie-Hellman P-256, P-384	RSA 2048 RSA 4096 Pre-Shared Secret ECDSA P-256 ECDSA P-384	3 Key Triple-DES CBC AES CBC 128/192/256	HMAC-SHA-1 HMAC-SHA-256 HMAC-SHA-384
IKEv2 ¹⁰	Diffie-Hellman (L = 2048, N = 256) EC Diffie-Hellman P-256, P-384	RSA 2048 RSA 4096 Pre-Shared Secret	3 Key Triple-DES CBC AES CBC 128/192/256	HMAC-SHA-1 HMAC-SHA-256 HMAC-SHA-384

⁷ Vendor Affirmed per IG D.1rev3

⁸ RSA 4096 SigVer was not tested by the CAVP; however, it is Approved for use per CMVP guidance, because RSA 2048 SigVer was tested and testing for RSA 4096 SigVer is not available.

⁹ RFC 2409 governs the generation of the Triple-DES encryption key for use with the IKEv1 protocol

¹⁰ IKEv2 generates the SKEYSEED according to RFC7296, from which all keys are derived to include Triple-DES keys.

Protocol	Key Exchange	Auth	Cipher	Integrity
		ECDSA P-256 ECDSA P-384		
IPsec ESP	IKEv1 with optional: Diffie-Hellman (L = 2048, N = 256) EC Diffie-Hellman P-256, P-384	IKEv1	3 Key Triple-DES CBC AES CBC 128/192/256 AES GCM ¹¹ 128/192/256	HMAC-SHA-256
	IKEv2 with optional: Diffie-Hellman (L = 2048, N = 256) EC Diffie-Hellman P-256, P-384	IKEv2	3 Key Triple-DES CBC AES CBC 128/192/256 AES GCM ¹² 128/192/256	
SSHv2 ¹³	EC Diffie-Hellman P-256, P-384, P-521	RSA 2048 ECDSA P-256	3 Key Triple-DES CBC AES CBC 128/192/256 AES CTR 128/192/256	HMAC-SHA-1 HMAC-SHA-256 HMAC-SHA-512

No part of these protocols, other than the KDF, have been tested by the CAVP and CMVP. The IKE and SSH algorithms allow independent selection of key exchange, authentication, cipher and integrity. In Table 10 above, each column of options for a given protocol is independent and may be used in any viable combination.

2.2 Disallowed Algorithms and Protocols

These algorithms and protocols are non-Approved algorithms and protocols that are disabled when the module is operated in an Approved mode of operation. The algorithms are available as part of the SSH connect service when the module is operated in the non-Approved mode.

Algorithms

- RSA with key size less than 2048
- ECDSA with ed25519 curve
- ECDH with ed25519 curve
- ARCFOUR
- Blowfish
- CAST

¹¹ The AES GCM IV is generated according to RFC4106 and is used only in the context of the IPsec protocol as allowed in IG A.5. Rekeying is triggered after 2³² AES GCM transformations.

¹² The AES GCM IV is generated according to RFC4106 and is used only in the context of the IPsec protocol as allowed in IG A.5. Rekeying is triggered after 2³² AES GCM transformations.

¹³ RFC 4253 governs the generation of the Triple-DES encryption key for use with the SSHv2 protocol

- DSA (SigGen, SigVer; non-compliant)
- HMAC-MD5
- HMAC-RIPEMD160
- UMAC

Protocols

- Finger
- ftp
- rlogin
- telnet
- tftp
- xnm-clear-text

2.3 Critical Security Parameters

All CSPs and public keys used by the module are described in this section. The CSPs in Table 11 are used in the FIPS Standard and FIPS Reduced Throughput Modes. The FIPS Recovery Mode uses a subset of the CSPs found in Table 11. The IPsec CSPs are not available for use in FIPS Recovery Mode of operation.

Table 11 – Critical Security Parameters (CSPs)

Name	Description and usage
DRBG_Seed	Seed material used to seed or reseed the DRBG
DRBG_State	Values V and Key which comprise the HMAC_DRBG state
Entropy Input	256 bits entropy (min) input used to instantiate the DRBG
DH Shared Secret	The shared secret used in Diffie Hellman (DH) key exchange. 256 bits. Established per the Diffie-Hellman key agreement.
ECDH Shared Secret	The shared secret used in Elliptic Curve Diffie Hellman (ECDH) key exchange. 256, 384 or 521 bits. Established per the Elliptic Curve Diffie-Hellman key agreement.
SSH PHK	SSH Private host key. 1 st time SSH is configured, the keys are generated. ECDSA P-256. RSA2048
SSH ECDH	Ephemeral EC Diffie-Hellman private key used in SSH. ECDH P-256, P-384, or P-521
SSH-SEK	SSH Session Keys: SSH Session Encryption Key: 3-Key Triple-DES or AES (128,192,256); SSH Session Integrity Key: HMAC.
ESP-SEK	IPsec ESP Session Keys: ESP Session Encryption Key: 3-Key Triple-DES or AES (128, 192, 256); Session Integrity Key: HMAC. ESP Session Integrity Key: HMAC
IKE-PSK	Pre-Shared Key used to authenticate IKE connections.
IKE-Priv	IKE Private Key. RSA 2048.
IKE-SKEYID	IKE SKEYID. IKE secret used to derive IKE and IPsec ESP session keys.
IKE-SEK	IKE Session Keys: IKE Session Encryption Key: 3-Key Triple-DES or AES (128,192,256); IKE Session Integrity Key: HMAC
IKE-DH-PRI	Ephemeral Diffie-Hellman or EC Diffie-Hellman private key used in IKE. DH (L = 2048, N = 256), ECDH P-256, or ECDH P-384
HMAC key	The libMD HMAC keys: message digest for hashing password and critical function test.

Name	Description and usage
User Password	Passwords used to authenticate Users to the module.
CO Password	Passwords used to authenticate COs to the module.

Table 12 – Public Keys

Name	Description and usage
SSH-PUB	SSH Public Host Key used to identify the host. ECDSA P-256, RSA 2048, RSA 3072, or RSA 4096
SSH-ECDH-PUB	Ephemeral EC Diffie-Hellman public key used in SSH key establishment. ECDH P-256, P-384, or P-521
IKE-PUB	IKE Public Key ECDSA P-256, ECDSA P-384, RSA 2048.
IKE-DH-PUB	Ephemeral Diffie-Hellman or EC Diffie-Hellman public key used in IKE key establishment. DH 2048 modp, ECDH P-256, or ECDH P-384
Auth-User Pub	User Authentication Public Keys. Used to authenticate users to the module. ECDSA P-256, P-384, P-521, RSA 2048, RSA 4096
Auth-CO Pub	CO Authentication Public Keys. Used to authenticate CO to the module. ECDSA P-256, P-384, P-521, RSA 2048, RSA 4096
Root CA	ECDSA P-256 X.509 Certificate; Used to verify the validity of the Juniper Package CA at software load and also at runtime for integrity.
Package CA	ECDSA P-256 X.509 Certificate; Used to verify the validity the Juniper Image at software load and also at runtime for integrity.

3 Roles, Authentication and Services

3.1 Roles and Authentication of Operators to Roles

The module supports two roles: Crypto Officer (CO) and User. The module supports concurrent operators, but does not support a maintenance role and/or bypass capability. The module enforces the separation of roles using identity-based operator authentication.

The Crypto Officer role configures and monitors the module via a console or SSH connection. As root or super-user, the Crypto Officer has permission to view and edit secrets within the module and establish VPN tunnels.

The User role monitors the router via the console or SSH. The User role cannot change the configuration.

3.2 Authentication Methods

The module implements two forms of Identity-Based authentication, Username and password over the Console and SSH as well as Username and ECDSA or RSA public key over SSH.

Password authentication: The module enforces 10-character passwords (at minimum) chosen from the 96 human readable ASCII characters. The maximum password length is 20-characters. Thus, the probability of a successful random attempt is $1/96^{10}$, which is less than $1/1,000,000$.

The module enforces a timed access mechanism as follows: For the first two failed attempts (assuming 0 time to process), no timed access is enforced. Upon the third attempt, the module enforces a 5-second delay. Each failed attempt thereafter results in an additional 5-second delay above the previous (e.g. 4th failed attempt = 10-second delay, 5th failed attempt = 15-second delay, 6th failed attempt = 20-second delay, 7th failed attempt = 25-second delay).

This leads to a maximum of 7 possible attempts in a one-minute period for each getty. The best approach for the attacker would be to disconnect after 4 failed attempts and wait for a new getty to be spawned. This would allow the attacker to perform roughly 9.6 attempts per minute (576 attempts per hour/60 mins); this would be rounded down to 9 per minute, because there is no such thing as 0.6 attempts. The probability of a success with multiple consecutive attempts in a one-minute period is $9/(96^{10})$, which is less than $1/100,000$.

ECDSA signature verification: SSH public-key authentication. The module supports ECDSA (P-256, P-384, and P-521), which has a minimum equivalent computational resistance to attack of either 2^{128} , 2^{192} or 2^{256} depending on the curve. Thus, the probability of a successful random attempt is $1/(2^{128})$, which is less than $1/1,000,000$. Configurable SSH connection establishment rate limits the number of connection attempts, and thus failed authentication attempts in a one-minute period to a maximum of 15,000 attempts. The probability of a success with multiple consecutive attempts in a one-minute period is $15,000/(2^{128})$, which is less than $1/100,000$.

RSA signature verification: SSH public-key authentication. The module supports RSA (2048, 4096), which has a minimum equivalent computational resistance to attack of 2^{112} (2048). Thus, the probability of a successful random attempt is $1/(2^{112})$, which is less than $1/1,000,000$. Configurable SSH connection establishment rate limits the number of connection attempts, and thus failed authentication attempts in

a one-minute period to a maximum of 15,000 attempts. The probability of a success with multiple consecutive attempts in a one-minute period is $15,000 / (2^{112})$, which is less than $1/100,000$.

3.3 Approved and Allowed Services

All services implemented by the module are listed in the tables below. Table 16 lists the access to CSPs by each service.

Table 13 – Authenticated Services in FIPS Standard and Reduced Throughput Modes

Service	Description	CO	User
Configure security	Security relevant configuration	x	
Configure	Non-security relevant configuration	x	
Secure Traffic	IPsec protected routing	x	
Status	Show status	x	x
Zeroize	Destroy all CSPs	x	
SSH connect	Initiate SSH connection for SSH monitoring and control (CLI)	x	x
IPsec connect	Initiate IPsec connection (IKE)	x	
Console access	Console monitoring and control (CLI)	x	x
Remote reset	Software initiated reset, Performs self-tests on demand	x	
Load image	Verification and loading of a validated firmware image into the router.	x	

Table 14 – Authenticated Services in FIPS Recovery Mode

Service	Description	CO	ser
Configure security	Security relevant configuration	x	
Configure	Non-security relevant configuration	x	
Status	Show status	x	x
Zeroize	Destroy all CSPs	x	
SSH connect	Initiate SSH connection for SSH monitoring and control (CLI)	x	x
Console access	Console monitoring and control (CLI)	x	x
Remote reset	Software initiated reset, Performs self-tests on demand	x	
Load image	Verification and loading of a validated firmware image into the router.	x	

Table 15 – Unauthenticated Services in FIPS Standard and Reduced Throughput Modes

Service	Description
Local reset	Hardware reset or power cycle
Traffic	Traffic requiring no cryptographic services (e.g. OSPF, BGP)
LED status	Basic

Table 16 – Unauthenticated Services in FIPS Recovery Mode

Service	Description
Local reset	Hardware reset or power cycle
LED status	Basic

Table 17 – CSP Access Rights within Services

Service	CSPs																
	DRBG_Seed	DRBG_State	Entropy Input String	DH Shared Secret	ECDH Shared Secret	SSH PHK	SSH ECDH	SSH-SEK	ESP-SEK	IKE-PSK	IKE-Priv	IKE-SKEYID	IKE-SEK	IKE-DH-PRI	HMAC Key	CO-PW	User-PW
Configure security	--	E	--	GW R	GW R	GW R	--	--	--	W R	GW R	--	--	--	G	W	W
Configure	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--
Secure traffic	--	--	--	--	--	--	--	--	E	--	--	--	E	--	--	--	--
Status	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--
Zeroize	Z	Z	Z	Z	Z	Z	Z	Z	Z	Z	Z	Z	Z	Z	Z	Z	Z
SSH connect	--	E	--	--	E	E	GE	GE	--	--	--	--	--	--	--	E	E
IPsec connect	--	E	--	E	E	--	--	--	G	E	E	GE	G	GE	--	--	--
Console access	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	E	E
Remote reset	GEZ	GZ	GZ	Z	Z	--	Z	Z	Z	--	--	Z	Z	Z	Z	--	--
Load Image	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--
Local reset	GEZ	GZ	GZ	Z	Z	--	Z	Z	Z	--	--	Z	Z	Z	--	--	--
Traffic	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

G = Generate: The module generates the CSP

R = Read: The CSP is read from the module (e.g. the CSP is output)

E = Execute: The module executes using the CSP

W = Write: The CSP is updated or written to the module (persistent storage)

Z = Zeroize: The module zeroizes the CSP.

3.4 Non-Approved Services

The following services are available in the non-Approved mode of operation. The security functions provided by the non-Approved services are identical to the Approved counterparts with the exception of SSH Connect (non-compliant) and IPsec Connect (non-compliant). SSH Connect (non-compliant) supports the security functions identified in Section 2.2 and the SSHv2 row of Table 10. The IPsec (non-compliant) supports the DSA in Section 2.2 and the IKEv1, IKEv2 and IPsec rows of Table 10.

Table 18 – Non-Approved Authenticated Services in FIPS Standard and Reduced Throughput Modes

Service	Description	CO	User
Configure security (non-compliant)	Security relevant configuration	x	
Configure (non-compliant)	Non-security relevant configuration	x	
Secure Traffic (non-compliant)	IPsec protected routing	x	
Status (non-compliant)	Show status	x	x
Zeroize (non-compliant)	Destroy all CSPs	x	
SSH connect (non-compliant)	Initiate SSH connection for SSH monitoring and control (CLI)	x	x
IPsec connect (non-compliant)	Initiate IPsec connection (IKE)	x	
Console access (non-compliant)	Console monitoring and control (CLI)	x	x
Remote reset (non-compliant)	Software initiated reset, Performs self-tests on demand	x	
Load image (non-compliant)	Verification and loading of a validated firmware image into the router.	x	

Table 19 – Non-Approved Authenticated Services in FIPS Recovery Mode

Service	Description	CO	User
Configure security (non-compliant)	Security relevant configuration	x	
Configure (non-compliant)	Non-security relevant configuration	x	
Status (non-compliant)	Show status	x	x
Zeroize (non-compliant)	Destroy all CSPs	x	

Service	Description	CO	User
SSH connect (non-compliant)	Initiate SSH connection for SSH monitoring and control (CLI)	x	x
Console access (non-compliant)	Console monitoring and control (CLI)	x	x
Remote reset (non-compliant)	Software initiated reset, Performs self-tests on demand	x	
Load image (non-compliant)	Verification and loading of a validated firmware image into the router.	x	

Table 20 – Non-Approved Unauthenticated traffic in FIPS Standard and Reduced Throughput Modes

Service	Description
Local reset	Hardware reset or power cycle
Traffic	Traffic requiring no cryptographic services
LED Status	Basic

Table 21 – Non-Approved Unauthenticated Services in FIPS Recovery Mode

Service	Description
Local reset	Hardware reset or power cycle
LED status	Basic

4 Self-tests

Each time the module is powered up it tests that the cryptographic algorithms still operate correctly and that sensitive data have not been damaged. Power-up self-tests are available on demand by power cycling the module (Remote reset service).

On power up or reset, the module performs the self-tests described below. All KATs for the selected Approved mode of operation must be completed successfully prior to any other use of cryptography by the module. If one of the Routing Engine KATs fails, the module enters the Error state. If one or more of the Multiservices MPC KATs fails, the module selects the Reduced Throughput or Recovery Approved mode of operation.

The module performs the following power-up self-tests:

Routing Engine (RE):

- **Firmware Integrity check:** using ECDSA P-256 with SHA-256
- **Kernel KATs**
 - SP 800-90A HMAC DRBG KAT
 - Health-tests initialize, re-seed, and generate
 - HMAC-SHA-1 KAT
 - HMAC-SHA-256 KAT
 - SHA-384 KAT
 - SHA-512 KAT
- **QuickSec KATs**
 - AES-CBC (128/192/256) Encrypt KAT
 - AES-CBC (128/192/256) Decrypt KAT
 - SP 800-90A HMAC DRBG KAT
 - Health-tests initialize, re-seed, and generate
 - HMAC-SHA-1 KAT
 - HMAC-SHA-256 KAT
 - HMAC-SHA-384 KAT
 - KDF-IKE-V1 KAT
 - KDF-IKE-V2 KAT
 - Triple-DES-CBC Encrypt KAT
 - Triple-DES-CBC Decrypt KAT
- **OpenSSL KATs**
 - AES-CBC (128/192/256) Encrypt KAT
 - AES-CBC (128/192/256) Decrypt KAT
 - SP 800-90A HMAC DRBG KAT
 - Health-tests initialize, re-seed, and generate
 - ECDSA P-256 Sign/Verify PCT
 - HMAC-SHA-1 KAT
 - HMAC-SHA-224 KAT
 - HMAC-SHA-256 KAT
 - HMAC-SHA-512 KAT
 - KAS-ECC KAT
 - KDF-SSH KAT

- RSA 2048 w/ SHA-256 Sign KAT
- RSA 2048 w/ SHA-256 Verify KAT
- SHA-384 KAT
- Triple-DES-CBC Encrypt KAT
- Triple-DES-CBC Decrypt KAT
- **LibMD KATs**
 - HMAC SHA-1 KAT
 - HMAC SHA-256 KAT
 - SHA-512 KAT

MS-MPC

- **XLP (MS MPC) KATs**
 - AES-CBC (128/192/256) Encrypt KAT
 - AES-CBC (128/192/256) Decrypt KAT
 - AES-GCM (128/256) Encrypt KAT
 - AES-GCM (128/256) Decrypt KAT
 - ECDSA P-256 Sign/Verify PCT
 - HMAC-SHA-256 KAT
 - RSA 2048 w/ SHA-256 Sign KAT
 - RSA 2048 w/ SHA-256 Verify KAT
 - Triple-DES-CBC Encrypt KAT
 - Triple-DES-CBC Decrypt KAT
- **Critical Function Test**
 - The cryptographic module performs a verification of a limited operational environment, and verification of optional non-critical packages.

The module also performs the following conditional self-tests:

- Continuous RNG Test on the OpenSSL and QuickSec SP 800-90A HMAC-DRBG.
- Continuous RNG test on the NDRNG.
- Pairwise consistency test when generating ECDSA and RSA key pairs.
- Firmware Load Test (ECDSA signature verification).

5 Physical Security Policy

The modules physical embodiment is that of a multi-chip standalone device that meets Level 1 Physical Security requirements. The module is completely enclosed in a rectangular nickel or clear zinc coated, cold rolled steel, plated steel and brushed aluminum enclosure. The module enclosure is made of production grade materials. There are no ventilation holes, gaps, slits, cracks, slots, or crevices that would allow for any sort of observation of any component contained within the cryptographic boundary.

6 Security Rules and Guidance

The module design corresponds to the security rules below. The term *must* in this context specifically refers to a requirement for correct usage of the module in the Approved mode; all other statements indicate a security rule implemented by the module.

1. The module clears previous authentications on power cycle.
2. When the module has not been placed in a valid role, the operator does not have access to any cryptographic services.
3. Power up self-tests do not require any operator action.
4. Data output is inhibited during key generation, self-tests, zeroization, and error states.
5. Status information does not contain CSPs or sensitive data that if misused could lead to a compromise of the module.
6. There are no restrictions on which keys or CSPs are zeroized by the zeroization service.
7. The module does not support a maintenance interface or role.
8. The module does not support manual key entry.
9. The module does not output intermediate key values.
10. The module requires two independent internal actions to be performed prior to outputting plaintext CSPs.
11. The Crypto Officer must verify that the firmware image to be loaded on the module is a FIPS validated image. If any other non-validated image is loaded the module will no longer be a FIPS validated module.
12. The Crypto Officer must retain control of the module while zeroization is in process.
13. If the module loses power and then it is restored, then a new key shall be established for use with the AES GCM encryption/decryption processes.
14. The operator is required to ensure that Triple-DES keys used in IPsec and SSH do not perform more than 2^{20} encryptions.
15. Virtual Chassis is not supported in FIPS mode and shall not be configured on the modules.
16. RSA key generated shall only be 2048 bits or greater.
17. The module shall not be configured to use a radius server and the radius server capability shall be disabled.

6.1 Cryptographic-Officer Guidance

The Crypto Officer must check to verify the firmware image on the Router is the FIPS 140-2 validated image. If the image is the FIPS 140-2 validated image, then proceed to section 6.1.2.

6.1.1 Installing the FIPS-Approved firmware image

Download the validated firmware image from the <https://www.juniper.net/support/downloads/junos.html>. Log in to the Juniper Networks authentication system using the username (generally your e-mail address) and password supplied by Juniper Networks representatives. Select the validated firmware image. Download the firmware image to a local host or to an internal software distribution site.

Connect to the console port on the device from your management device and log in to the Junos OS CLI. Copy the firmware package to the device to the `/var/tmp/` directory. Install the new package on the device:

```
user@device> request vmhost software add /var/tmp/package.tgz.
```

NOTE: If you need to terminate the installation, do not reboot your device; instead, finish the installation and then issue the `request system software delete package.tgz` command, where `package.tgz` is, for example, `junos-vmhost-install-mx-x86-64-19.1R2.8.tgz`. This is your last chance to stop the installation.

Reboot the device to load the installation and start the new firmware image:

```
user@device> request vmhost reboot
```

After the reboot has completed, log in and use the `show version` command to verify that the new version of the firmware is successfully installed.

Also install the `fips-mode` package and `jpfe-fips` package needed for Routing Engine KATS and for Line card KATS. The following are the commands used for installing these packages:

```
user@device >request system software add optional://fips-mode.tgz
```

```
user@device >request system software add optional://jpfe-fips.tgz
```

6.1.2 Enabling FIPS-Approved Mode of Operation

The Crypto Officer is responsible for initializing the module in a FIPS-Approved mode of operation. The FIPS-Approved mode of operation is not automatically enabled. The Crypto Officer shall place the module in the FIPS-Approved mode by first zeroizing the device to delete all keys and CSPs. The zeroizing instructions are in section 1.3 of this document. Next, the Crypto Officer shall follow the steps found in the *Junos OS FIPS Evaluated Configuration Guide for MX240, MX480, MX960 Devices, Release*

19.1R2 document Chapters 3 & 7 to place the module into a FIPS-Approved mode of operation. The steps from the aforementioned document are repeated below:

The FIPS Modes are not automatically enabled once the firmware image is installed on the platform. These steps are for putting the module into the FIPS Standard Mode, FIPS Reduced Throughput Mode or FIPS Recovery Mode.

The FIPS Standard Mode will be selected automatically if all power-on self-tests pass successfully during the reboot after committing the module to FIPS mode. The FIPS Reduced Throughput Mode of operation is selected automatically if all the RE KATs pass and at least one MS-MPC in the module chassis passes all of its self-tests, and at least one MS-MPC in the module chassis fails one or more of its self-tests. The FIPS Recovery Mode is selected automatically if all the RE KATs pass and if each of the MS-MPC line cards fails one or more of its KATs. To enable FIPS mode in Junos OS on the device:

1. Zeroize the device as explained in Section 1.3. Once device comes up in amnesiac mode post zeroize, connect to device using console port with username “root”, enter the configuration mode and configure the root-authentication password, then configure crypto-officer credentials. The root authentication password can be configured as follows:

```
root@device> edit
Entering configuration mode
[edit]
root@device# set system root-authentication plain-text-password
New password:
Retype new password:

[edit]
root@device# commit
configuration check succeeds
commit complete
```

2. Login to the device with crypto-officer credentials and enter configuration mode:

```
crypto-officer@device> edit
Entering configuration mode
[edit]
crypto-officer@device#
```

3. Enable FIPS mode on the device by setting the FIPS level to 1, and verify the level:

```
[edit]
crypto-officer@device # set system fips chassis level 1

[edit]
crypto-officer@device # show system fips chassis level
level 1;
```

4. Commit the configuration

```
[edit ]
crypto-officer@device# commit
configuration check succeeds
  Generating RSA key /etc/ssh/fips_ssh_host_key
  Generating RSA2 key /etc/ssh/fips_ssh_host_rsa_key
  Generating ECDSA key /etc/ssh/fips_ssh_host_ecdsa_key
[edit]
'system'
  reboot is required to transition to FIPS level 1
  commit complete
```

5. Reboot the device:

```
[edit]
crypto-officer@device# run request vmhost reboot
Reboot the system ? [yes,no] (no) yes
```

During the reboot, the device runs Known Answer Tests (KATS). It returns a login prompt:

```
crypto-officer@device:fips>
```

6. After the reboot has completed, log in and use the show version l command to verify the firmware version is the validated version.

```
crypto-officer@device:fips> show version
```

6.1.3 Placing the Module in a Non-Approved Mode of Operation

As Crypto Officer, the operator needs to disable the FIPS-Approved mode of operation on the device to return it to a non-Approved mode of operation. To disable FIPS-Approved mode on the device, the router must be zeroized. Follow the steps found in section 1.3 to zeroize the router.

6.2 User Guidance

The user should verify that the module is operating in the desired mode of operation (FIPS-Approved mode or non-Approved mode) by observing the command prompt when logged into the device. If the string “:fips” is present then the device is operating in a FIPS-Approved mode. Otherwise it is operating in a non-Approved mode.

All FIPS users, including the Crypto Officer, must observe security guidelines at all times.

All FIPS users must:

- Keep all passwords confidential.
- Store devices and documentation in a secure area.



- Deploy devices in secure areas.
- Check audit files periodically.
- Conform to all other FIPS 140-2 security rules.
- Follow below guidelines:
 - Users are trusted.
 - Users abide by all security guidelines.
 - Users do not deliberately compromise security.
 - Users behave responsibly at all times.

7 References and Definitions

The following standards are referred to in this Security Policy.

Table 22 – References

Abbreviation	Full Specification Name
[FIPS140-2]	<i>Security Requirements for Cryptographic Modules, May 25, 2001</i>
[SP800-131A]	<i>Transitions: Recommendation for Transitioning the Use of Cryptographic Algorithms and Key Lengths, January 2011</i>
[IG]	<i>Implementation Guidance for FIPS PUB 140-2 and the Cryptographic Module Validation Program</i>

Table 23 – Acronyms and Definitions

Acronym	Definition
AES	Advanced Encryption Standard
DH	Diffie-Hellman
DSA	Digital Signature Algorithm
ECDH	Elliptic Curve Diffie-Hellman
ECDSA	Elliptic Curve Digital Signature Algorithm
EMC	Electromagnetic Compatibility
ESP	Encapsulating Security Payload
FIPS	Federal Information Processing Standard
HMAC	Keyed-Hash Message Authentication Code
IKE	Internet Key Exchange Protocol
IPsec	Internet Protocol Security
MD5	Message Digest 5
MIC	Modular Interface Card
MPC	Modular PIC Concentrator
MS	Multiservices
PIC	Port Interface Card
RE	Routing Engine
RSA	Public-key encryption technology developed by RSA Data Security, Inc.
SCB	Router Control Board
SHA	Secure Hash Algorithms
SSH	Secure Shell
Triple-DES	Triple - Data Encryption Standard

Table 24 – Datasheets

Model	Title	URL
MX240 MX480 MX960	MX240, MX480, MX960 3D Universal Edge Routers	https://www.juniper.net/assets/us/en/local/pdf/datasheets/1000597-en.pdf
MS-MPC	MX Series MS-MPC and MS-MIC Service Cards	http://www.juniper.net/documentation/en_US/junos15.1/topics/concept/ms-mic-and-mpc-overview.html