

FIPS 140-2 Non-Proprietary Security Policy

FortiAnalyzer™-3000D



<i>FortiAnalyzer™ FIPS 140-2 Non-Proprietary Security Policy</i>	
Document Version:	1.1
Publication Date:	January 7, 2016
Description:	Documents FIPS 140-2 Level 2 Security Policy issues, compliancy and requirements for FIPS compliant operation.
Hardware Version:	C1AA61-03AA-0000
Firmware Version:	v5.2.4-build0738 150923 (GA)


FortiAnalyzer™-3000D: FIPS 140-2 Non-Proprietary Security Policy

05-524-263791-20151007

for FortiAnalyzer™ 5.2


Copyright© 2016 Fortinet, Inc. All rights reserved. Fortinet®, FortiGate®, FortiCare® and FortiGuard®, and certain other marks are registered trademarks of Fortinet, Inc., in the U.S. and other jurisdictions, and other Fortinet names herein may also be registered and/or common law trademarks of Fortinet. All other product or company names may be trademarks of their respective owners. Performance and other metrics contained herein were attained in internal lab tests under ideal conditions, and actual performance and other results may vary. Network variables, different network environments and other conditions may affect performance results. Nothing herein represents any binding commitment by Fortinet, and Fortinet disclaims all warranties, whether express or implied, except to the extent Fortinet enters a binding written contract, signed by Fortinet's General Counsel, with a purchaser that expressly warrants that the identified product will perform according to certain expressly-identified performance metrics and, in such event, only the specific performance metrics expressly identified in such binding written contract shall be binding on Fortinet. For absolute clarity, any such warranty will be limited to performance in the same ideal conditions as in Fortinet's internal lab tests. In no event does Fortinet make any commitment related to future deliverables, features or development, and circumstances may change such that any forward-looking statements herein are not accurate. Fortinet disclaims in full any covenants, representations, and guarantees pursuant hereto, whether express or implied. Fortinet reserves the right to change, modify, transfer, or otherwise revise this publication without notice, and the most current version of the publication shall be applicable.

This document may be freely reproduced and distributed whole and intact including this copyright notice.

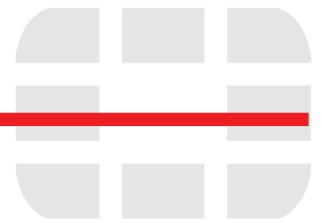

Contents

Overview	2
References	2
Introduction	2
Security Level Summary	3
Module Description	4
Cryptographic Boundary	4
Cryptographic Module Ports and Interfaces	5
FortiAnalyzer-3000D Module.	5
Web-Based Manager.	7
Command Line Interface	7
Roles, Services and Authentication	7
Roles	7
FIPS Approved Services.	8
Non-FIPS Approved Services	9
Authentication	9
Physical Security	10
Operational Environment.	11
Cryptographic Key Management.	12
Random Number Generation	12
Entropy Token	12
Key Zeroization	12
Algorithms	13
Cryptographic Keys and Critical Security Parameters.	14
Key Archiving.	15
Electromagnetic Interference/Electromagnetic Compatibility (EMI/EMC)	15
Mitigation of Other Attacks	16
FIPS 140-2 Compliant Operation.	16
Enabling FIPS mode	16
Self-Tests	17

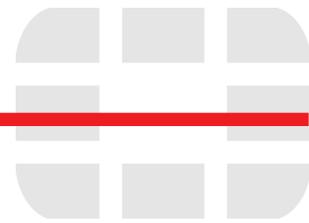

Overview

This document is a FIPS 140-2 Security Policy for Fortinet Incorporated's FortiAnalyzer-3000D Centralized Reporting appliance. This policy describes how the FortiAnalyzer-3000D (hereafter referred to as the 'Module') meets the FIPS 140-2 security requirements and how to operate the Module in a FIPS compliant manner. This policy was created as part of the FIPS 140-2 Level 2 validation of the Module.

This document contains the following sections:

- [Introduction](#)
- [Security Level Summary](#)
- [Module Description](#)
- [Mitigation of Other Attacks](#)
- [FIPS 140-2 Compliant Operation](#)
- [Self-Tests](#)

The Federal Information Processing Standards Publication 140-2 - *Security Requirements for Cryptographic Modules* (FIPS 140-2) details the United States Federal Government requirements for cryptographic modules. Detailed information about the FIPS 140-2 standard and validation program is available on the NIST (National Institute of Standards and Technology) website at <http://csrc.nist.gov/groups/STM/cmvp/index.html>.

References

This policy deals specifically with operation and implementation of the Module in the technical terms of the FIPS 140-2 standard and the associated validation program. Other Fortinet product manuals, guides and technical notes can be found at the Fortinet technical documentation website at <http://docs.fortinet.com>.

Additional information on the entire Fortinet product line can be obtained from the following sources:


- Find general product information in the product section of the Fortinet corporate website at <http://www.fortinet.com/products>.
- Find on-line product support for registered products in the technical support section of the Fortinet corporate website at <http://www.fortinet.com/support>
- Find contact information for technical or sales related questions in the contacts section of the Fortinet corporate website at <http://www.fortinet.com/contact>.
- Find security information and bulletins in the FortiGuard Center of the Fortinet corporate website at <http://www.fortinet.com/FortiGuardCenter>.

Introduction

The FortiAnalyzer family of logging, analyzing, and reporting appliances securely aggregate log data from Fortinet devices and other syslog-compatible devices. Using a comprehensive suite of customizable reports, users can filter and review records, including traffic, event, virus, attack, Web content, and email data.

A typical deployment architecture for a FortiAnalyzer appliance is shown in Figure 1.

Figure 1: A typical FortiAnalyzer deployment architecture

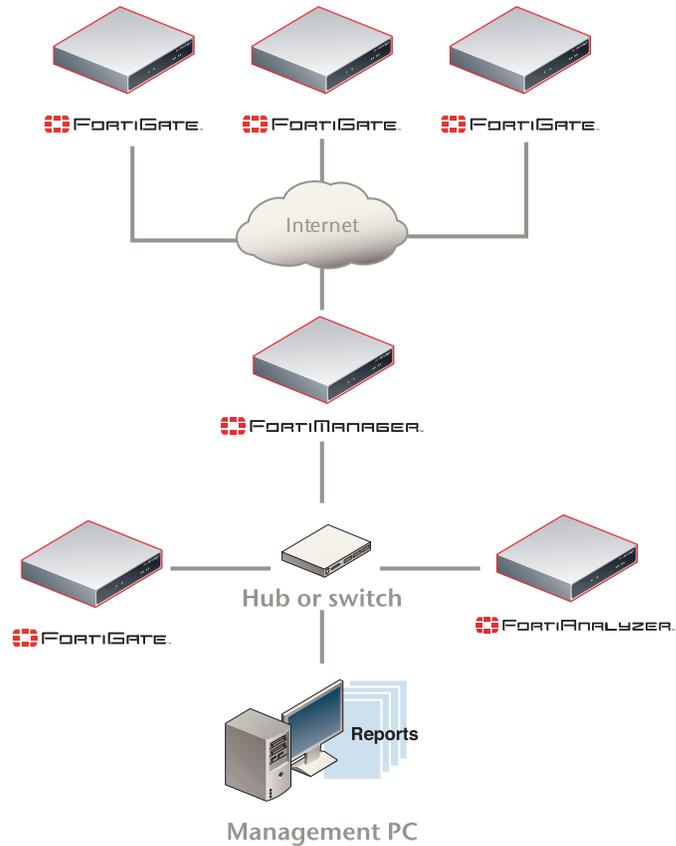

Security Level Summary

The Module meets the overall requirements for a FIPS 140-2 Level 2 validation.

Table 1: Summary of FIPS security requirements and compliance levels

Security Requirement	Compliance Level
Cryptographic Module Specification	2
Cryptographic Module Ports and Interfaces	3
Roles, Services and Authentication	3
Finite State Model	2
Physical Security	2
Operational Environment	N/A
Cryptographic Key Management	2
EMI/EMC	2

Table 1: Summary of FIPS security requirements and compliance levels

Security Requirement	Compliance Level
Self-Tests	2
Design Assurance	3
Mitigation of Other Attacks	N/A

Module Description

The Module is a multiple chip, standalone cryptographic module consisting of production grade components contained in a physically protected enclosure in accordance with FIPS 140-2 Level 2 requirements.

FortiAnalyzer-3000D specifications:

- 6 network interfaces (4 x 10/100/1000 RJ45 Ports, 2 x GbE SFP Ports)
- Intel Xeon E5-2620, 6 Cores, 2.0GHz x 2
- 16GB (DDR3 2GBx8) RAM
- 2RU rackmount device
- 8 x 2TB HDD (16TB)
- 1 power supply

The validated firmware version is FortiAnalyzer 5.2.4, build0738, 150923 (GA).

Cryptographic Boundary


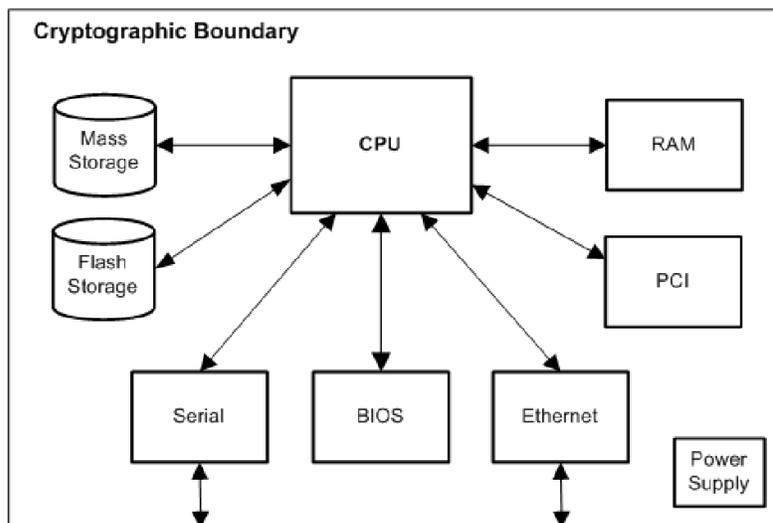
Figure 2: FortiAnalyzer Physical Cryptographic Boundary

Figure 3: FortiAnalyzer Logical Cryptographic Boundary

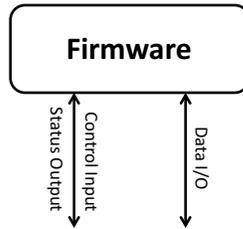

The cryptographic boundary of the Module is defined as the Module's external, physical casing and includes all of the hardware, firmware, ports and interfaces required to operate the Module in a secure, FIPS 140-2 compliant manner.

Cryptographic Module Ports and Interfaces

FortiAnalyzer-3000D Module

Figure 4: FortiAnalyzer-3000D Front and Rear Panel Connectors and Ports

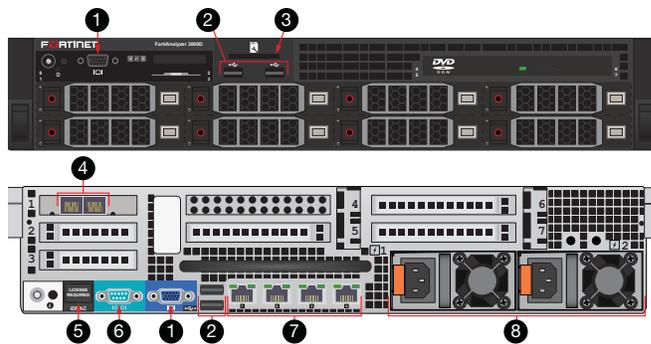


Table 2: FortiAnalyzer-3000D Front and Rear Panel Connectors and Ports

#	Interface	Type	Supported Logical Interfaces	Description
1	Video	VGA	N/A	Not in use.
2	USB	USB-A	Control input, key loading, archiving, entropy input	USB server ports for USB key, token, or management functions.
3	Flash Media	SD	N/A	Not in use.
4	SFP Ports 5 & 6	SFP	Data input, data output, control input and status output	1Gbps/auto small form-factor pluggable transceiver ports.
5	iDRAC7 Enterprise Port	N/A	N/A	This port is disabled.

6	Console Port	DB-9	Control input, status output	Optional serial connection to the management computer. Provides access to the CLI.
7	Ethernet Ports 1-4	RJ-45	Data input, data output, control input and status output	Integrated Gigabit Ethernet 4-port switch connection for the internal network.
8	Power Supplies	N/A	N/A	100-240V AC, 50-60Hz, redundant power supplies.

Figure 5: FortiAnalyzer-3000D Status LEDs

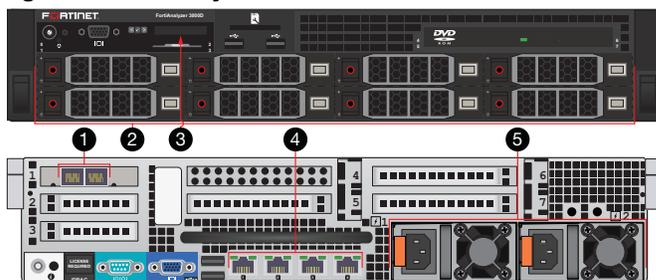


Table 3: FortiAnalyzer-3000D Status LEDs


#	LED	State	Description
1	Ports 5 & 6	Amber	Port is connected at 1Gbps.
		Green	Port is connected at 10/100Mbps.
		Off	Port is offline.
2	Hard Drives	Green	The drive is online.
		Flashing Amber 4 Times per Second	The drive has failed.
		Flash Green, Amber, and Off	The drive is predicted to fail.
		Flashing Green 2 Times per Second	The drive is rebuilding.
		Off	The drive is ready for insertion or removal.
3	LCD Panel	Blue	The system is operating normally.
		Amber	The system requires attention. An error code will be displayed.
4	Ethernet Ports Link/Activity	Flashing Green	Port is transmitting and receiving data.
		Off	Port is not connected.
4	Ethernet Ports Speed	Green	Port is connected at 1Gbps.
		Amber	Port is connected at less than 1Gbps.
		Off	Port is not connected.
5	Power Supplies	Green	The power supply is operational.
		Flashing Amber	The power supplies are mismatched.
		Off	Power is not connected.

Web-Based Manager

The FortiAnalyzer web-based manager provides GUI based access to the Module and is the primary tool for configuring the Module. The manager requires a web browser on the management computer and an Ethernet connection between the FortiAnalyzer unit and the management computer.

A web-browser that supports Transport Layer Security (TLS) 1.0 is required for remote access to the web-based manager when the Module is operating in FIPS mode. HTTP access to the web-based manager is not allowed in FIPS mode and is disabled.

Figure 6: The FortiAnalyzer web-based manager*

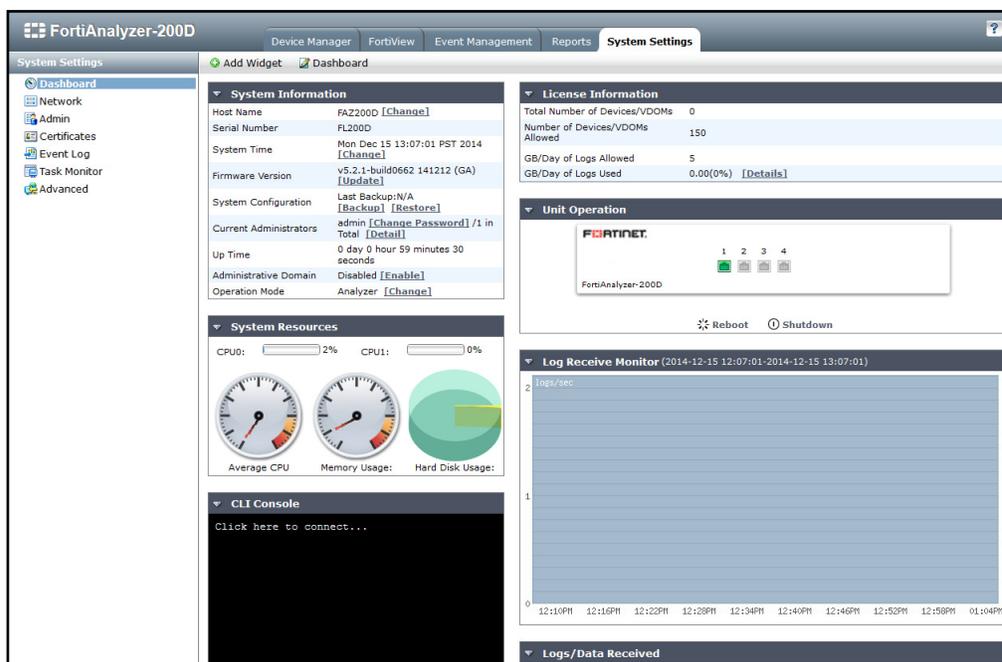

*Screenshot is from FortiAnalyzer-200D

Command Line Interface

The FortiAnalyzer Command Line Interface (CLI) is a full-featured, text based management tool for the Module. The CLI provides access to all of the possible services and configuration options in the Module. The CLI uses a console connection or a network (Ethernet) connection between the FortiAnalyzer unit and the management computer. The console connection is a direct serial connection. Terminal emulation software is required on the management computer using either method. For network access, a Telnet or SSH client that supports the SSH v2.0 protocol is required (SSH v1.0 is not supported in FIPS mode). Telnet access to the CLI is not allowed in FIPS mode and is disabled.

Roles, Services and Authentication

Roles

When configured in FIPS mode, the Module provides the following roles:

- Crypto Officer
- Network User

The Crypto Officer role is initially assigned to the default 'admin' operator account. The Crypto Officer role has read-write access to all of the Module's administrative services. The initial Crypto Officer can create additional Crypto Officer operator accounts by giving the account super user access permissions.

The Module provides a Network User role. Network users have read/write access to a restricted set of the Module's administrative services. Network User accounts are created by Crypto Officers and do not have super user access permissions.

The Module does not provide a Maintenance role.

FIPS Approved Services

The following tables detail the types of FIPS approved services available to each role in each mode of operation, the types of access for each role and the Keys or CSPs they affect.

The access types are abbreviated as follows:

Read Access	R
Write Access	W
Execute Access	E

Table 4: Services available to Crypto Officers

Service	Access	Key/CSP
authenticate to Module	WE	Crypto Officer Password, Diffie-Hellman Key, HTTP/TLS and SSH Server/Host Keys, HTTPS/TLS and SSH Session Authentication Keys, and HTTPS/TLS Session Encryption Keys, DRBG Output, DRBG Seed, DRBG Input String
show system status	WE	N/A
show FIPS mode enabled/disabled (console/CLI only)	WE	N/A
enable FIPS mode of operation (console only)	WE	Configuration Integrity Key
key zeroization (console/CLI only)	WE	All keys. (See "Key Zeroization" on page 12)
execute factory reset (disable FIPS mode, console/CLI only)	WE	All keys except firmware update key, configuration integrity key, configuration backup key
execute FIPS on-demand self-tests (console only)	E	Configuration Integrity Key, Firmware Integrity Key
add/delete operators and network users	WE	Crypto Officer Password, Network User Password
set/reset operator and network user passwords	WE	Crypto Officer Password, Network User Password
backup/restore configuration file	WE	Configuration Encryption Key, Configuration Backup Key
read/set/delete/modify Module configuration	WE	N/A
execute firmware update	E	Firmware Update Key

Table 4: Services available to Crypto Officers

Service	Access	Key/CSP
read log data	WE	N/A
delete log data (console/CLI only)	WE	N/A
execute system diagnostics (console/CLI only)	WE	N/A

Table 5: Services available to Network Users

Service/CSP	Access	Key/CSP
authenticate to Module	WE	Crypto Officer Password, Diffie-Hellman Key, HTTP/TLS and SSH Server/Host Keys, HTTPS/TLS and SSH Session Authentication Keys, and HTTPS/TLS Session Encryption Keys, DRBG Output, DRBG Seed, DRBG Input String
show system status (console only)	WE	N/A
execute FIPS on-demand self-tests (console only)	E	Configuration Integrity Key, Firmware Integrity Key
show FIPS mode enabled/disabled (console/CLI only)	WE	N/A

Non-FIPS Approved Services

The Module also provides the following non-FIPS approved services:

- Configuration backups using password protection
- LLTP and PPTP VPN
- Services marked with an asterisk (*) in [Table 4](#) & [Table 5](#) are considered non-approved when using the following algorithms:
 - Non-compliant-strength Diffie-Hellman
 - Non-compliant-strength RSA key wrapping
 - DES
 - HMAC-MD5

The above services shall not be used in the FIPS approved mode of operation.

Authentication

The Module implements identity based authentication. Operators must authenticate with a user-id and password combination to access the Module remotely or locally via the console. Remote operator authentication is done over HTTPS (TLS) or SSH. The password entry feedback mechanism does not provide information that could be used to guess or determine the authentication data.

The minimum password length is 8 characters when in FIPS mode (maximum password length is 32 characters). The password may contain any combination of upper- and lowercase letters, numbers, and printable symbols; allowing for 94 possible characters. The odds of correctly guessing a password are $1/94^8$ which is significantly lower than one in a million. Recommended procedures to increase the password strength are explained in “[FIPS 140-2 Compliant Operation](#)” on page 16.

Note that operator authentication over HTTPS/SSH and using the console is subject to a limit of 3 failed authentication attempts in 1 minute; thus, the maximum number of attempts in one minute is 3. Therefore, the probability of a success with multiple consecutive attempts in a one-minute period is $3/94^8$ which is less than 1/100,000.

Physical Security

The Module meets FIPS 140-2 Security Level 2 requirements by using production grade components and an opaque, sealed enclosure. Access to the enclosure is restricted through the use of tamper-evident seals to secure the overall enclosure.

The seals are red wax/plastic with white lettering that reads "Fortinet Inc. Security Seal". The seals are serialized.


The tamper seals are not applied at the factory prior to shipping. It is the responsibility of the Crypto Officer to apply the seals before use to ensure full FIPS 140-2 compliance. Once the seals have been applied, the Crypto Officer must develop an inspection schedule to verify that the external enclosure of the Module and the tamper seals have not been damaged or tampered with in any way. The Crypto Officer is required to zeroize the cryptographic module by following the steps in the Key Zeroization section of the SP. The Crypto Officer is also responsible for securing and controlling any unused seals.

The surfaces should be cleaned with 99% Isopropyl alcohol to remove dirt and oil before applying the seals. Ensure the surface is completely clean and dry before applying the seals. If a seal needs to be re-applied, completely remove the old seal and clean the surface with an adhesive remover before following the instructions for applying a new seal. The seals require a curing time of 24 hours to ensure proper adhesion.

Additional seals can be ordered through your Fortinet sales contact. Reference the SKU FIPS-SEAL-RED when ordering and specify the number of seals required.

The FortiAnalyzer-3000D uses 2 seals to secure:

- the external enclosure (1 seal, see Figure 5)
- the front faceplate (1 seal, see Figure 6)

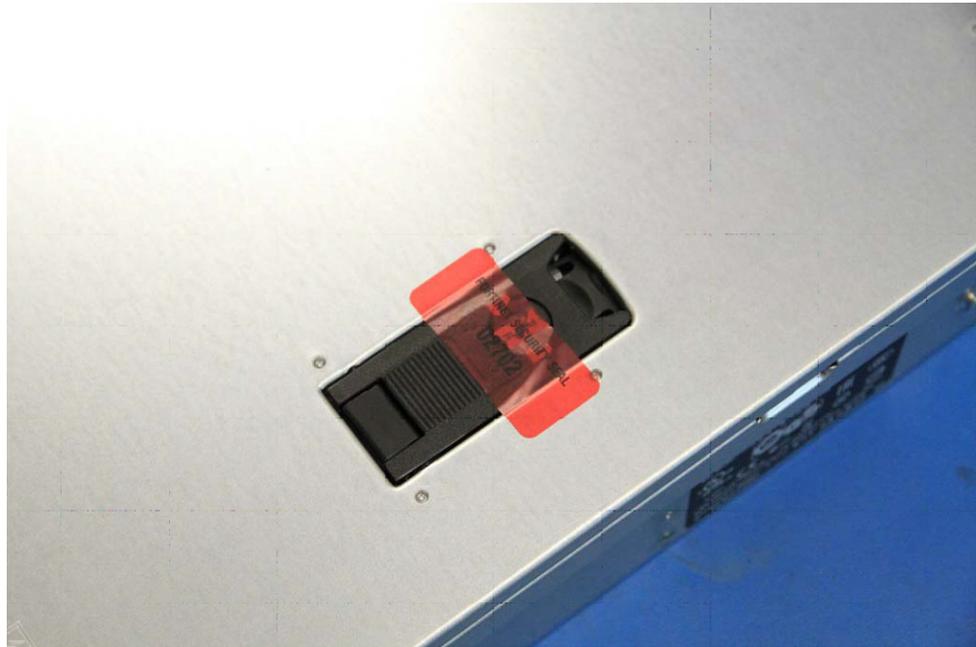Figure 7: FortiAnalyzer-3000D Enclosure Seal, top**Figure 8: FortiAnalyzer-3000D Front Faceplate seal**

Operational Environment

The Module consists of the combination of the FortiAnalyzer operating system and the FortiAnalyzer appliance. The FortiAnalyzer operating system can only be installed, and run, on a FortiAnalyzer appliance. The FortiAnalyzer operating system provides a proprietary and non-modifiable operating system.

Cryptographic Key Management

Random Number Generation

The Module uses a firmware based, deterministic random bit generator (DRBG) that conforms to NIST Special Publication 800-90A. The Module generates cryptographic keys whose strengths are modified by available entropy. There is no assurance of the minimum strength of generated keys.

Entropy Token

The Module uses an entropy token (part number FTR-ENT-1 or part number FTR-ENT-2) to seed the DRBG during the Module's boot process and to periodically reseed the DRBG. The entropy token is not included in the boundary of the Module and therefore no assurance can be made for the correct operation of the entropy token nor is there a guarantee of stated entropy.

The default reseed period is once every 24 hours (1440 minutes). The token must be installed to complete the boot process and to reseed of the DRBG. The entropy token is responsible for loading a minimum of 256 bits of entropy.

Key Zeroization

The zeroization process must be performed under the direct control of the operator. The operator must be present to observe that the zeroization method has completed successfully.

All keys and CSPs are zeroized by erasing the Module's flash memory and then power cycling the FortiManager unit. To erase the flash memory, execute the following command from the CLI:

```
execute erase-disk flash <erase-times>
```

Algorithms

Table 6: FIPS Approved Algorithms

Algorithm	NIST Certificate Number
CTR DRBG (NIST SP 800-90A) with 256-bits	930
Triple-DES in CBC mode with 192-bits	2002
AES in CBC mode (128-, 192-, 256-bits)	3595
SHA-1	2957
SHA-256	2957
SHA-384	2957
SHA-512	2957
HMAC SHA-1	2292
HMAC SHA-256	2292
HMAC SHA-384	2292
HMAC SHA-512	2292
RSA PKCS1 V1.5 -Signature Generation: 2048 and 3072-bit -Signature Verification: 1024, 2048 and 3072-bit -For legacy use, the module supports 1024-bit RSA keys and SHA-1 for signature verification	1849
CVL (SSH) - with TDES-192 bit-CBC, AES 128 bit-, AES 256 bit -CBC (using SHA1, SHA256 and SHA512)	617
CVL (TLS) - TLS1.0/1.1	617

Table 7: FIPS Allowed Algorithms

Algorithm
RSA (key wrapping; key establishment methodology provides 112 or 128 bits of encryption strength)
Diffie-Hellman (key agreement; key establishment methodology provides between 112 and 201 bits of encryption strength)
NDRNG (Entropy Token) - please refer to the "Entropy Token" on page 12 for additional information.

Table 8: Non-FIPS Approved Algorithms

Algorithm
DES (disabled in FIPS mode)
MD5 (disabled in FIPS mode)
HMAC MD5 (disabled in FIPS mode)
RSA is non-compliant when keys less than 2048 bits are used, since such keys do not provide the minimum required 112 bits of encryption strength.
Diffie-Hellman is non-compliant when keys less than 2048 bits are used, since such keys do not provide the minimum required 112 bits of encryption strength.

Note that the SSH and TLS protocols have not been tested by the CMVP or CAVP.

Cryptographic Keys and Critical Security Parameters

The following table lists all of the cryptographic keys and critical security parameters used by the Module. The following definitions apply to the table:

Key or CSP	The key or CSP description.
Storage	Where and how the keys are stored
Usage	How the keys are used
Zeroization	The key zeroization method

Table 9: Cryptographic Keys and Critical Security Parameters used in FIPS Mode

Key or CSP	Generation	Storage	Usage	Zeroization
Diffie-Hellman Keys	Automatic	SDRAM Plaintext	Key agreement and key establishment	By erasing the flash memory and power cycling the FortiAnalyzer unit
NDRNG output string	Automatic	Flash RAM Plain-text	Input string for the entropy pool	By erasing the flash memory and power cycling the FortiManager unit
DRBG seed	Automatic	Flash RAM Plain-text	Seed used by the DRBG (output from NDRNG)	By erasing the flash memory and power cycling the FortiAnalyzer unit
DRBG output	Automatic	Flash RAM Plain-text	Random numbers used in cryptographic algorithms	By erasing the flash memory and power cycling the FortiAnalyzer unit
DRBG v and key values	Automatic	Flash Ram Plain-text	Internal state values for the DRBG	By erasing the flash memory and power cycling the FortiAnalyzer unit
Firmware Update Key	Preconfigured	Flash RAM Plain-text	Verification of firmware integrity when updating to new firmware versions using RSA public key (firmware load test)	By erasing the flash memory and power cycling the FortiAnalyzer unit
Firmware Integrity Key	Preconfigured	Flash RAM Plain-text	Verification of firmware integrity in the firmware integrity test using RSA public key (firmware integrity test)	By erasing the flash memory and power cycling the FortiAnalyzer unit
HTTPS/TLS Server/Host Key	Preconfigured	Flash RAM Plain-text	RSA private key used in the HTTPS/TLS protocols (key establishment)	By erasing the flash memory and power cycling the FortiAnalyzer unit
HTTPS/TLS Session Authentication Key	Automatic	SDRAM Plain-text	HMAC SHA-1 or HMAC SHA-256 key used for HTTPS/TLS session authentication	By erasing the flash memory and power cycling the FortiAnalyzer unit
HTTPS/TLS Session Encryption Key	Automatic	SDRAM Plain-text	AES or Triple-DES key used for HTTPS/TLS session encryption	By erasing the flash memory and power cycling the FortiAnalyzer unit
SSH Server/Host Key	Preconfigured	Flash RAM Plain-text	RSA private key used in the SSH protocol (key establishment)	By erasing the flash memory and power cycling the FortiAnalyzer unit

Table 9: Cryptographic Keys and Critical Security Parameters used in FIPS Mode

Key or CSP	Generation	Storage	Usage	Zeroization
SSH Session Authentication Key	Automatic	SDRAM Plain-text	HMAC SHA-1 or HMAC SHA-256 key used for SSH session authentication	By erasing the flash memory and power cycling the FortiAnalyzer unit
SSH Session Encryption Key	Automatic	SDRAM Plain-text	AES or Triple-DES key used for SSH session encryption	By erasing the flash memory and power cycling the FortiAnalyzer unit
Crypto Officer Password	Manual	Flash RAM SHA-1 hash	Used to authenticate operator access to the Module	By erasing the flash memory and power cycling the FortiAnalyzer unit
Configuration Integrity Key	Preconfigured	Flash RAM Plain-text	HMAC SHA-256 hash used for configuration integrity test	By erasing the flash memory and power cycling the FortiAnalyzer unit
Configuration Encryption Key	Automatic	Flash RAM Plain-text	AES key used to encrypt CSPs on the flash RAM and in the backup configuration file (except for crypto officer passwords in the backup configuration file)	By erasing the flash memory and power cycling the FortiAnalyzer unit
Configuration Backup Key	Automatic	Flash RAM Plain-text	HMAC SHA-256 key used to encrypt crypto officer passwords in the backup configuration file	By erasing the flash memory and power cycling the FortiAnalyzer unit
Network User Password	Manual	Flash RAM SHA-1 hash	Used to authenticate network access to the Module	By erasing the flash memory and power cycling the FortiAnalyzer unit

Note: The Generation column lists all of the keys/CSPs and their entry/generation methods. Manual entered keys are entered by the operator electronically (as defined by FIPS) using the console or a management computer. Pre-configured keys are set as part of the firmware (hardcoded) and are not operator modifiable. Automatic keys are generated as part of the associated protocol.

Key Archiving

The Module supports key archiving to a management computer or USB token as part of a Module configuration file backup. Operator entered keys are archived as part of the Module configuration file. The configuration file is stored in plain text, but keys in the configuration file are either AES encrypted using the Configuration Encryption Key or stored as a keyed hash using HMAC SHA-1 using the Configuration Backup Key.

Electromagnetic Interference/Electromagnetic Compatibility (EMI/EMC)

The Module complies with EMI/EMC requirements for Class A (business use) devices as specified by Part 2, 15, of the FCC rules. The following table lists the specific lab and FCC report information for the Module.

Table 10: FCC Report Information

Module	Lab Information	FCC Report Number
FAZ-3000D	The Module is declared to conform with EMI/EMC requirements for Class A (business use) devices as specified by Part 2, 15, of the FCC rules.	N/A

Mitigation of Other Attacks

The Module does not mitigate against any other attacks.

FIPS 140-2 Compliant Operation

FIPS 140-2 compliant operation requires both that you use the Module in its FIPS mode of operation and that you follow secure procedures for installation and operation of the FortiAnalyzer unit. You must ensure that:

- The FortiAnalyzer unit is configured in the FIPS mode of operation.
- The FortiAnalyzer unit is installed in a secure physical location.
- Physical access to the FortiAnalyzer unit is restricted to authorized operators.
- A USB entropy token is used to seed the DRBG.
- The token remains in the USB port during operation
- Administrative passwords are at least 8 characters long.
- Administrative passwords are changed regularly.
- Administrator account passwords must have the following characteristics:
 - One (or more) of the characters must be capitalized
 - One (or more) of the characters must be numeric
 - One (or more) of the characters must be non-alphanumeric (e.g. punctuation mark)
- Administration of the Module is permitted using only validated administrative methods. These are:
 - Console connection
 - Web-based manager via HTTPS
 - Command line interface (CLI) access via SSH
- Diffie-Hellman groups of less than 2048 bits are not used.
- Client side RSA certificates must use 2048 bit or greater key sizes.
- Only approved and allowed algorithms are used (see [“Algorithms” on page 13](#)).

The Module can be used in either of its two operation modes: NAT/Route or Transparent. NAT/Route mode applies security features between two or more different networks (for example, between a private network and the Internet). Transparent mode applies security features at any point in a network. The current operation mode is displayed on the web-based manager Status page and in the output of the `get system status` CLI command.

Enabling FIPS mode

To enable the FIPS 140-2 compliant mode of operation, the operator must execute the following command from the Local Console:

```

config system fips
  set status enable
end

```

The Operator is required to supply a password for the admin account which will be assigned to the Crypto Officer role.

The supplied password must be at least 8 characters long and correctly verified before the system will restart in FIPS mode.

Upon restart, the Module will execute self-tests to ensure the correct initialization of the Module's cryptographic functions.

After restarting, the Crypto Officer can confirm that the Module is running in FIPS mode by executing the following command from the CLI:

```
get system status
```

If the Module is running in FIPS mode, the system status output will display the line:

```
FIPS mode: enable
```

Note: Enabling/disabling the FIPS mode of operation will automatically invoke the key zeroization service. The key zeroization is performed immediately after FIPS mode is enabled/disabled. Additionally, certain non-FIPS approved services may still be available, but they shall not be used in the FIPS approved mode of operation.

Self-Tests

The Module executes the following self-tests during startup and initialization:

- Firmware integrity test using RSA signatures
- Configuration integrity test using HMAC SHA-1
- Triple-DES, CBC mode, encrypt known answer test
- Triple-DES, CBC mode, decrypt known answer test
- AES, CBC mode, encrypt known answer test
- AES, CBC mode, decrypt known answer test
- HMAC SHA-1 known answer test
- SHA-1 known answer test (test as part of HMAC SHA-1 known answer test)
- HMAC SHA-256 known answer test
- SHA-256 known answer test (test as part of HMAC SHA-256 known answer test)
- RSA signature generation known answer test
- RSA signature verification known answer test
- DRBG known answer test

The results of the startup self-tests are displayed on the console during the startup process. The startup self-tests can also be initiated on demand using the CLI command **execute fips kat all** (to initiate all self-tests) or **execute fips kat <test>** (to initiate a specific self-test).

When the self-tests are run, each implementation of an algorithm is tested - e.g. when the AES self-test is run, all AES implementations are tested.

The Module executes the following conditional tests when the related service is invoked:

- Continuous TRNG test
- Continuous NDRNG test
- Continuous DRBG test

- RSA pairwise consistency test
- Configuration integrity test using HMAC SHA-256
- Firmware load test using RSA signatures

If any of the self-tests or conditional tests fail, the Module enters an error state as shown by the console output below:

```
Self-tests failed
Entering error mode...
The system is going down NOW !!
The system is halted.
```

All data output and cryptographic services are inhibited in the error state.